

# Build a Water Wand To Blast Those Mites!

## PARTS LIST

1. 3/4" brass hose quick coupler (male and female)
2. 3/4" female hose thread x 3/4" slip
3. 3/4" schedule 40 PVC pipe
4. 3/4" male iron pipe thread x 3/4" slip
5. 3/4" brass ball valve with 3/4" female iron pipe thread
6. 3/4" 45 degree elbow (slip x slip)
7. 3/4" slip x 1/2" male iron pipe thread
8. Rainbird 1800 series flat half circle spray nozzle with shrub adaptor; OR Toro 570 flat half circle spray nozzle with shrub adaptor

A brass double female swivel hose-to-pipe fitting with 3/4" iron pipe thread x 3/4" hose thread can be substituted for Part No. 1. However Part No. 2 would then be changed to a 3/4" male iron pipe thread x 3/4" slip.

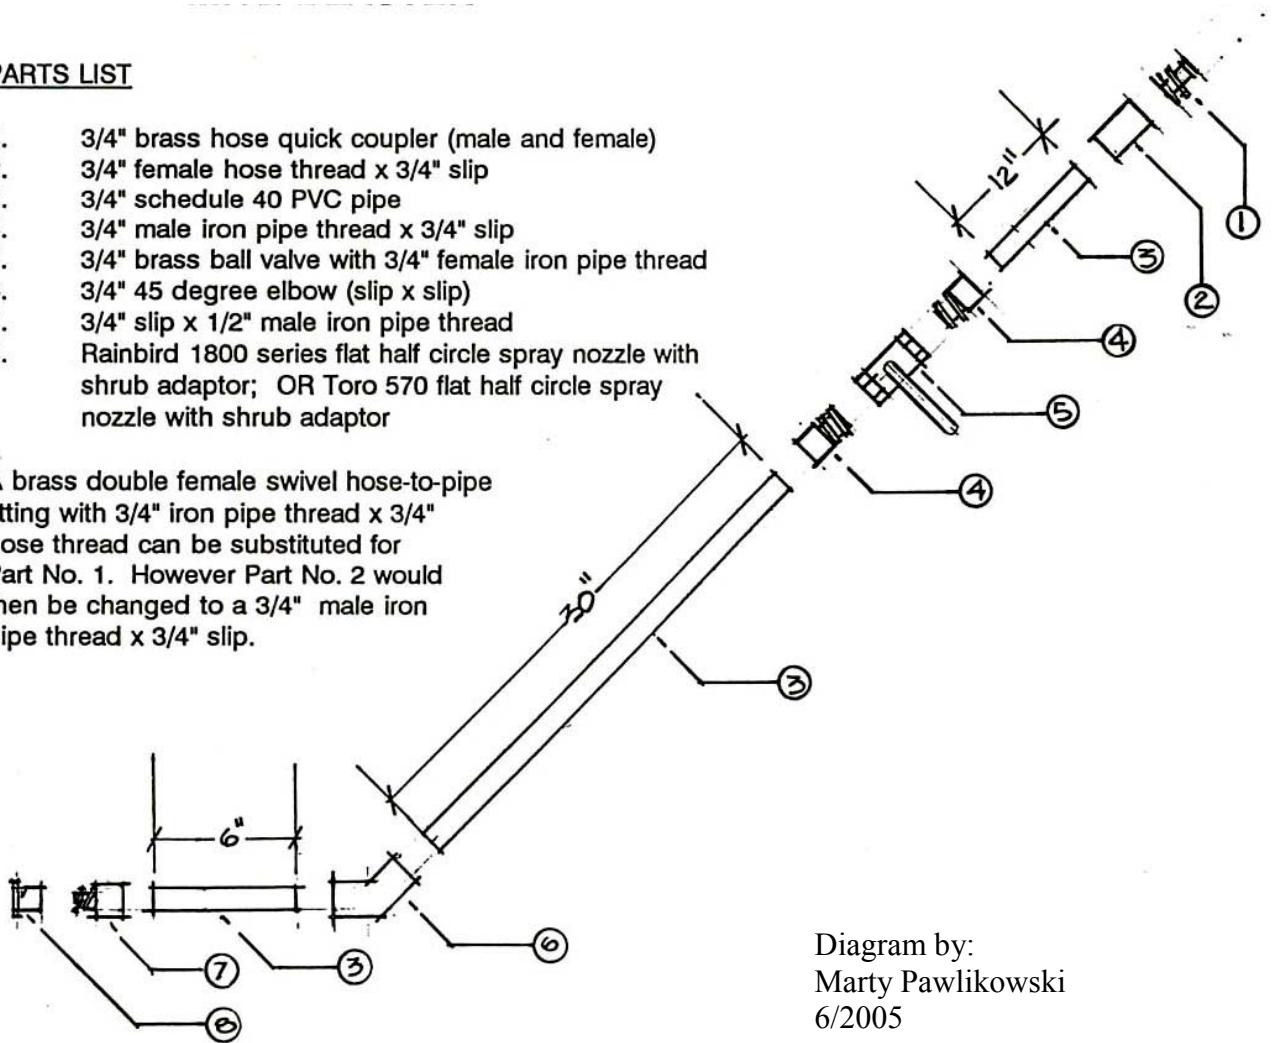


Diagram by:  
Marty Pawlikowski  
6/2005